

POWERWIST DRIVE® Link Belting



Classical Cross Section

POWERWIST DRIVE LINK BELTING	Classical Cross Section	Nominal Width		Part Numbers						Minimum Pulley Ø		Ride Height Above Rim				
		inches	mm	5' Sleeve	6' Sleeve	2m Sleeve	25'	100'	10m	30m	inches	mm	Min(in.)	Max(in.)	Min(mm)	Max(mm)
POWERWIST DRIVE	3L	3/8	10	0418010SL			0405010	0408010			2.00	51	0.12	0.17	3.0	4.2
POWERWIST DRIVE	Z/10	3/8	10			04100202			0410020	0418023	1.78	45	0.14	0.20	3.6	5.2
POWERWIST DRIVE	A/4L/13	1/2	13	0418030SL		04090502M	0405030	0408030	0410030	0418033	3.00	80	0.08	0.16	2.1	4.0
POWERWIST DRIVE	B/5L/17	5/8	17		0418050SL	04090302M	0405050	0408050	0410050	0418053	5.00	125	0.14	0.22	3.4	5.6
POWERWIST DRIVE	C/22	7/8	22				0405070	0408070	0410070	0418073	9.00	229	0.07	0.22	1.8	5.6


POWERWIST DRIVE® Wedge Link Belting



Wedge Cross Section

POWERWIST DRIVE LINK BELTING	Wedge Cross Section	Nominal Width		Part Numbers				Minimum Pulley Ø		Ride Height Above Rim			
		inches	mm	5m	25'	100'	20m	inches	mm	Min(in.)	Max(in.)	Min(mm)	Max(mm)
POWERWIST DRIVE	3V	3/8	10		0460025	0460000		2.65	67	0.18	0.30	4.5	7.5
POWERWIST DRIVE	5V	5/8	17		0460125	0460100		5.50	140	0.20	0.44	5.0	11.0
POWERWIST DRIVE	SPZ	3/8	10	0460616			0460666	2.65	67	0.18	0.30	4.5	7.5
POWERWIST DRIVE	SPA	1/2	13	0460716			0460766	3.55	90	0.16	0.41	4.1	10.3
POWERWIST DRIVE	SPB	5/8	17	0460816			0460866	5.50	140	0.20	0.44	5.0	11.0

POWERWIST® Specialty Link Belting




Cross Section

POWERWIST SPECIALTY LINK BELTING	Cross Section	Nominal Width		Part Numbers				Minimum Pulley Ø	
		inches	mm	25'	100'	10m	30m	inches	mm
POWERWIST Antistatic™	A/4L/13	1/2	13	0408505	0408501	040850010	0408500	3.00	80
POWERWIST Antistatic	B/5L/17	5/8	17	0408605	0408601	040860010	0408600	5.00	125
POWERWIST Double-V™	AA	1/2	13	0405230	0408230		0419230	3.00	80
POWERWIST Double-V	BB	5/8	17	0405250	0408250		0419250	5.00	125
POWERWIST Double-V	CC	7/8	22	0405270	0408270		0418270	9.00	229
POWERWIST Ground Round®	5/16"	5/16"	8	04051050	04081050		04191050	2.00	51
POWERWIST Ground Round	3/8"	3/8"	10	04051060	04081060		0419110	3.00	76
POWERWIST Ground Round	1/2"	1/2"	13	04051040	04081040		0419120	3.00	76
POWERWIST Ground Round	9/16"	9/16"	14	04051070	04081070		04151070	5.50	140
POWERWIST Ground Round	3/4"	3/4"	19		04081080		0415110	8.50	216



Force Deflection Gauge

Part Number	Max Belt Deflection (in)	Max Belt Deflection (cm)	Pounds	Kilograms
5700253	0 - 3 in	0 - 7.5 cm	0 - 35 lbs	0 - 16 kg

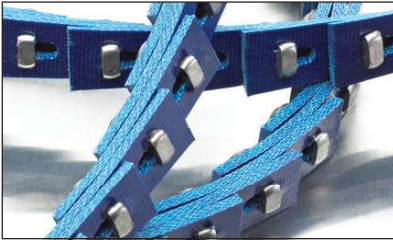

SuperTLink® Belting



Wedge

Wedge Cross Section

SUPERLINK BELTING	Wedge Cross Section	Nominal Width		Part Numbers				Minimum Pulley Ø		Ride Height Above Rim			
		inches	mm	5m	25'	100'	20m	inches	mm	Min(in.)	Max(in.)	Min(mm)	Max(mm)
SuperTLink	3V	3/8	10		0407025	0407100		2.80	71	0.18	0.40	4.6	10.0
SuperTLink	5V	5/8	17		0417025	0417100		5.50	140	0.06	0.20	1.4	5.1
SuperTLink	SPZ	3/8	10	L02Z5N			L02Z20N	2.80	71	0.18	0.40	4.6	10.0
SuperTLink	SPA	1/2	13	L02A5N			L02A20N	3.55	90	0.14	0.36	3.6	9.1
SuperTLink	SPB	5/8	17	L02B5			L02B20	5.50	140	0.06	0.20	1.4	5.1
SuperTLink	SPC	7/8	22	L02C5			L02C20	8.82	224	0.05	0.33	1.3	8.4
TLink Installation Tool	L02NT10	(10pk)											



NuTLink® Belting



Classical Cross Section

NUTLINK BELTING	Classical Cross Section	Nominal Width		Part Numbers		Minimum Pulley Ø		Ride Height Above Rim			
		inches	mm	5m	20m	inches	mm	Min(in.)	Max(in.)	Min(mm)	Max(mm)
NuTLink	Z/10	3/8	10	L01Z5	L01Z20	1.78	45	0.06	0.18	1.6	4.6
NuTLink	A/13	1/2	13	L01A5	L01A20	3.00	80	0.08	0.31	2.0	7.8
NuTLink	B/17	5/8	17	L01B5	L01B20	5.00	125	0.09	0.37	2.2	9.3
NuTLink	C/22	7/8	22	L01C5	L01C20	9.00	229	0.00	0.23	0.1	5.8
TLink Installation Tool	L02NT10	(10pk)									